



INSTRUCTIONS FOR:

CAR RAMPS LOW ENTRY 1.5 TONNE CAPACITY PER RAMP 3 TONNE CAPACITY PER PAIR

MODEL NO: **CAR3000LR**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to instruction manual



Wear safety footwear

1. SAFETY

- ✓ Always use on a clean, level surface; preferably a surface with some friction.
- ✓ Have a second person watching the ramps as the vehicle is driven on to warn of any unwanted movement.
- ✓ Ensure that the vehicle wheel rolls as far as the dished portion of the ramp.
- ✓ When in place, apply the vehicle handbrake and leave in gear or 'park', if an automatic.
- ✗ **DO NOT** exceed the rated capacity of the ramps (1500kg each, 3000kg per pair).
- ✗ **DO NOT** use this product for any purpose other than that for which it is designed.
- ✗ **DO NOT** use the ramps if they are in any way damaged.

2. INTRODUCTION

Made from durable polypropylene. These ramps are designed to allow jacking access to suitable jacking points on the vehicle. Not intended to raise a vehicle enough for under vehicle servicing.

3. SPECIFICATION

Model No:..... **CAR3000LR**
 Capacity Pair:..... 3tonne
 Ramp Height:..... 65mm
 Maximum Tyre Width:..... 180mm
 Overall Dimensions (L x W x H): 700 x 200 x 80mm

4. OPERATION

- 4.1. Raising (Apply section 1 safety instructions)**
- 4.1.1. Push the ramp as far as possible under the tyres of the wheels to be raised.
 - 4.1.2. Run the vehicle onto the ramps carefully, preferably being observed by a second person.
 - 4.1.3. When the wheel sits in the dished portion of the ramp, immobilise the vehicle.
 - 4.1.4. Proceed to jack the vehicle up, applying the safety details which apply to the jack.
- ▲ **DANGER:** If working under the vehicle, ensure that it is supported by suitably rated axle stands.
- 4.2. Lowering**
- 4.2.1. Ensure that the ramps are in place beneath the wheels before lowering the jack.
 - 4.2.2. Ensure that the area beneath the vehicle is clear before reversing off.

ENVIRONMENT PROTECTION



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

Note: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk