# SEALEY

### INSTRUCTIONS FOR

# MOBILE ENGINE REPAIR BENCH

MODEL NO: AP1200MW

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



manual

### 1. SAFETY

#### 1.1. GENERAL SAFETY

- WARNING! Ensure Health & Safety, local authority, and general workshop practice regulations are adhered to when using this trolley.
- Always load evenly with the centre of gravity of the load as near centre of the trolley as possible.
- **DO NOT** overload the trolley see Specifications section 3.
- ✓ Use the trolley in a suitable work area.
- ✓ Keep the work area clean, uncluttered and ensure there is adequate lighting.
- Keep the trolley clean and tidy in accordance with good workshop practice.
- **DO NOT** use the trolley for any purpose other than that for which it is designed.
- **DO NOT** stand on the trolley, use it as a ladder or allow others to ride on the trolley.
- Use the wheel locks to prevent the trolley from inadvertently moving.
- DO NOT leave unattended, especially when loaded, unless the wheels are locked, chocked or the trolley otherwise secured.
- DO NOT use trolley on uneven ground and DO NOT run over curbs or steps use a ramp.
- DO NOT use trolley if any part is significantly damaged, paying particular attention to the wheels.
- Keep children and unauthorised persons away from the work area.


# 2. INTRODUCTION

Industrial quality mobile engine repair workbench. Sturdy steel construction with powder coating finish to prevent corrosion. Angled worktop to one drain point makes this ideal for working on engines, transmissions, gearboxes or hydraulic systems. All fluids drain into a removable polyethylene container. Features a lockable drawer, a bottom shelf ideal for parts and tool storage and four swivel castors, two of which are locking.


# 3. SPECIFICATION

Model No.: AP1200MW	
Overall Size: (W x D x H)	1205 x 640 x 880mm
Worktable Size (W x D x H)	1195 x 635 x 10mm
Large Drawer (x1) (W x D x H)	340 x 430 x 130mm
Shelf Size (W x D x H)	1110 x 460 x 30mm
Canacity	250 kg

### 4. CONTENTS

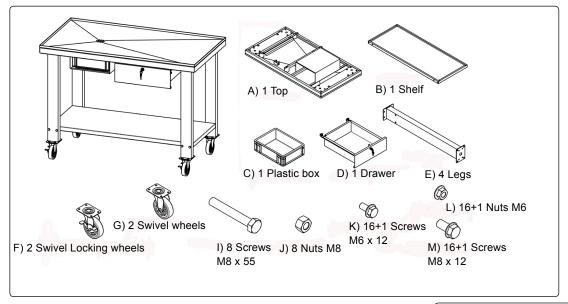

# 5. ASSEMBLY

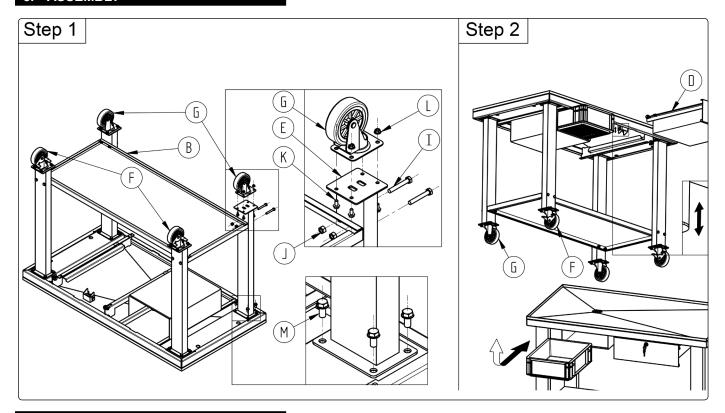

# 6. MAINTENANCE

- 6.1. Regular checks on the item will be required due to the nature of the service it is intended for.
- 6.2. Attention to be paid to swivel wheels to ensure stable, free and smooth rolling action.
- 6.3. Frame fixings to be checked and tightened regularly to ensure rigidity of structure.

Parts support is available for this product. To obtain parts please email sales@sealey.co.uk or telephone 01284 757500



#### **ENVIRONMENT PROTECTION**

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.

**Note**: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

Important: No Liability is accepted for incorrect use of this product.

Warranty: Guarantee is 12 months from purchase date, proof of which is required for any claim.