



# AIR COOLER/PURIFIER/HUMIDIFIER

MODEL NO: **SAC04**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

**IMPORTANT:** PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.



Refer to  
instructions



Indoor use only

## 1. SAFETY

### 1.1. ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:  
Check all electrical equipment and appliances to ensure that they are safe before using. Inspect power supply leads, plugs and all electrical connections for wear and damage. Sealey recommend that an RCD (Residual Current Device) is used with all electrical products. You may obtain an RCD by contacting your local Sealey stockist.

If the product is used in the course of business duties, it must be maintained in a safe condition and routinely PAT (Portable Appliance Test) tested.

- ✓ **ELECTRICAL SAFETY INFORMATION.** It is important that the following information is read and understood.

1.1.1. Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.

1.1.2. Regularly inspect power supply cables and plugs for wear or damage and check all connections to ensure that they are secure.

**IMPORTANT!:** Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse - see fuse rating in these instructions.

- \* **DO NOT** pull or carry the appliance by the power cable.
- \* **DO NOT** pull the plug from the socket by the cable. Remove the plug from the socket by maintaining a firm grip on the plug.
- \* **DO NOT** use worn or damaged cables, plugs or connectors. Ensure that any faulty item is repaired or replaced immediately by a qualified electrician.

1.1.3. This product is fitted with a BS1363/A 13 Amp 3 pin plug.

If the cable or plug is damaged during use, switch off the electricity supply and remove from use.

Replace a damaged plug with a BS1363/A 13 Amp 3 pin plug. If in doubt contact a qualified electrician.

Class II products are wired with live (brown) and neutral (blue) only are marked with the Class II symbol;

A) Connect the BROWN live wire to the live terminal 'L'.


B) Connect the BLUE neutral wire to the neutral terminal 'N'.

C) After wiring, check that there are no bare wires and ensure that all wires have been correctly connected.



Ensure that the cable outer sheath extends inside the cable restraint and that the restraint is tight.

- \* **DO NOT** connect either wire to the earth terminal.  
Sealey recommend that repairs are carried out by a qualified electrician.

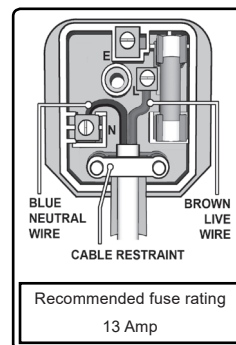

### 1.2. GENERAL SAFETY

- ✓ Only use as described in this manual.
- ✓ This product is intended for indoor household use ONLY. **DO NOT** use outdoors or for commercial or industrial purposes.
- \* **DO NOT** immerse the unit, plug or cord in water or spray with liquids. **DO NOT** place vases or similar objects filled with liquids near or on the unit.
- \* **DO NOT** use the unit within the immediate vicinity of water, such as bathtubs, wash bowls, swimming pools etc. where the likelihood of immersion or splashing could occur.
- ✓ Children should be supervised to ensure that they do not play with the appliance.
- ✓ Turn the unit off and unplug it from the mains when not in use, when moving the unit from one location to another and before maintenance or cleaning.
- ✓ This product is not intended for use by persons, including children, with reduced physical, sensory or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- \* **DO NOT** operate in the presence of explosive and/or flammable liquids and gases.
- \* **DO NOT** use the unit near an open flame, cooking or other heating appliance.
- \* **DO NOT** operate the unit with a damaged cord or plug, or if the product malfunctions or is damaged in any way.
- ✓ Avoid contact with moving parts. **DO NOT** insert anything through the grill when the unit is operating.
- ✓ Place the unit on a dry level surface to avoid spillage or overturning.
- \* **DO NOT** operate if the housing is damaged.
- \* **DO NOT** cover the grill, or operate in close proximity to curtains etc. Ensure there is adequate ventilation around the unit.
- ✓ If the mains lead is damaged it must be replaced by a suitably qualified person.
- ✓ If the unit is not working properly contact a qualified technician for repair. Never attempt to dismantle the unit.
- ✓ Never install or store the unit where it could be subject to:

- a. Heat sources such as radiators, heat registers, stoves or other products that produce heat
  - b. Direct sunlight
  - c. Mechanical vibration or shock
  - d. Excessive dust
  - e. Lack of ventilation, such as a cabinet or bookcase
  - f. Uneven surfaces
- ✗ **DO NOT** leave the product running unattended.
  - ✓ The castor wheels must be attached before use.
  - ✗ **DO NOT** withdraw the water tank while the unit is plugged in.
- NOTE:** In the interest of hygiene it is recommended that the water tank is drained every three days via the drain provided in the bottom of the water tank (fig.2.6) and fresh water used to replenish it.
- NOTE:** This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

## 2. INTRODUCTION


Multifunction three-in-one unit comprising air cooler, air purifier and humidifier with active carbon filter. Features three-speed fan and adjustable airflow direction. A 4ltr water tank supplied with two ice packs enables refrigerant-free cooling by evaporating water. Mounted on castors for manoeuvrability.

## 3. SPECIFICATION

Model no .....**SAC04**  
 Cooler .....65W  
 Cooling water tank ..... 4ltr  
 Max .airflow..... 7.5m/s  
 Weight.....4.6kg

| Figure / item number | Description         |
|----------------------|---------------------|
| 1.1                  | Control panel       |
| 1.2                  | Louvre adjustment   |
| 1.3                  | Oscillating louvres |
| 2.4                  | Filter cover        |
| 2.5                  | Filter              |
| 2.6                  | Water tank          |
| Ice blocks not shown |                     |

## 4. FEATURES

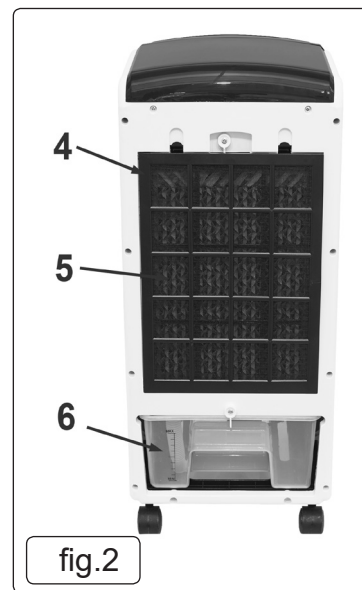

## 5. ASSEMBLY


- 5.1. FIT WHEELS**  
 5.1.1. Install wheels before use. Turn cooler upside down onto a soft mat, to protect it, gently push all 4 wheels into the base.

## 6. OPERATION

- 6.1. FILL WATER TANK (fig.2.6)**  
 **WARNING!** Disconnect from mains supply before filling the water tank.  
**IMPORTANT! DO NOT** use water with any chemical additives added. Water must be cold or lukewarm. **DO NOT** use water above 40°C.
- 6.1.1. Fill tank to maximum mark (fig.2.6). If using ice blocks reduce water volume accordingly.
- 6.2. USING THE ICE BLOCKS (OPTIONAL)**  
 6.2.1. There are two ice blocks included that can be used for extra cooling effect, if desired.  
**IMPORTANT:** Use only clean water for filling the ice blocks. **DO NOT** fill water above the maximum marking.
- 6.2.2. The ice blocks are not food safe, **DO NOT** use for storing food or beverages.  
 6.2.3. Keep away from children.  
 6.2.4. Empty the water and dry out the ice blocks before storage.  
 6.2.5. Open the cap, add clean water up to the maximum level marking, close and place in your freezer for a few hours.  
 6.2.6. Once frozen, the ice blocks can be added to the water tank.

**NOTE:** Make sure that the water level in the tank does not go above the 'MAX' level indicated on the scale marking.

- 6.2.7. Once water is filled, take extra care to ensure that you **DO NOT** tilt the cooler.
- 6.2.8. Keep the unit on a flat, stable ground without any obstacles near it when operating or moving it.
- 6.2.9. Connect to the mains supply.

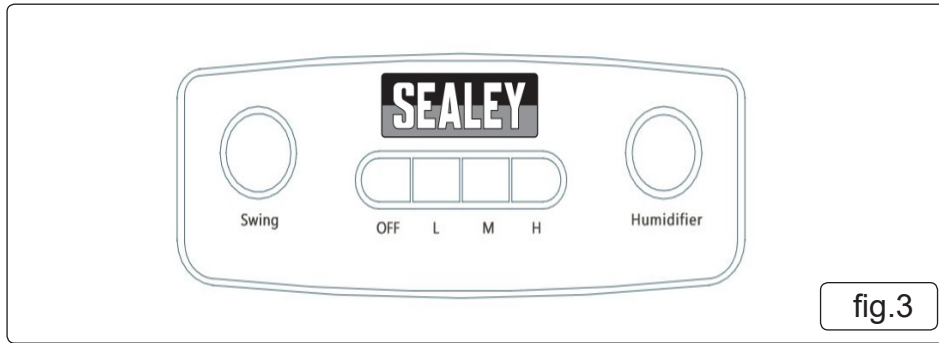

### 6.3. CONTROL PANEL (fig.3)

#### 6.3.1. SPEED

Select the relevant speed button to start the unit. There are three options – Low, Medium or High.

#### 6.3.2. SWING

Press this button to start or stop louvre oscillation from left to right.

#### 6.3.3. HUMIDIFIER

To begin humidification press the labelled button.

#### NOTE:

The fan needs to be running before either swing or humidifier functions operate.

#### 6.3.4. INTERNAL LOUVRES

Vertical adjustment of air stream angle can be achieved by using the small levers on the right hand side of the front grille (fig.1.2).

## 7. CLEANING

- WARNING!** Disconnect from mains supply before removing the filters or carrying out any cleaning or maintenance.
- DO NOT** use harsh detergents or chemical cleaners or solvents as they may damage the surface of plastic components.

#### 7.3.1. MAIN BODY

Use a soft duster to dust off all surfaces.

Clean the air filter and filter cover (fig.2.4, fig.2.5) using a vacuum cleaner on a regular basis (refer to 7.3.2.)

Wipe all the parts with a soft damp (not wet) cloth dipped in mild soapy water. **CAUTION:** Ensure that water doesn't get inside the unit. Use a dry cloth to thoroughly dry the unit before turning on.

#### 7.3.2. AIR INLET COVER AND INNER FILTER

Unclip the air inlet cover. Vacuum clean the inner filter. Replace the inner filter if necessary by pulling up the clip on the top edge and easing the inner filter out. Vacuum clean the inner screen. Fit new filter (if necessary) and clip the air inlet cover back in place.

#### 7.3.3. WATER TANK

- WARNING!** Unplug the unit from the mains supply before removing the water tank.

When the unit will not be used for some time, empty the water from the water tank. Use mild soap and water to clean the water tank. Allow it to air dry or wipe dry using a soft cloth. Make sure the water tank is completely dry before storage. This helps prevent any mould or mildew inside the water tank. Empty the water in the ice blocks and dry out before storage. Make sure the filter, filter cover and water tank are replaced in position before switching on again.



#### ENVIRONMENT PROTECTION

Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain any fluids (if applicable) into approved containers and dispose of the product and fluids according to local regulations.



#### WEEE REGULATIONS

Dispose of this product at the end of its working life in compliance with the EU Directive on Waste Electrical and Electronic Equipment (WEEE). When the product is no longer required, it must be disposed of in an environmentally protective way. Contact your local solid waste authority for recycling information.



#### BATTERY REMOVAL:

Under the Waste Batteries and Accumulators Regulations 2009, Jack Sealey Ltd are required to inform potential purchasers of products containing batteries (as defined within these regulations), that they are registered with Valpak's registered compliance scheme. Jack Sealey Ltd Batteries Producer Registration Number (BPRN) is BPRN00705.

**Note:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**Important:** No Liability is accepted for incorrect use of this product.

**Warranty:** Guarantee is 12 months from purchase date, proof of which is required for any claim.

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, Suffolk. IP32 7AR



01284 757500



01284 703534



sales@sealey.co.uk



www.sealey.co.uk