

baridi

Multifunction Steam Mop 1300W/230V



Model No. DH265

Thank you for purchasing a Dellonda product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.

Important Information

Please read these instructions carefully and note any safe operational requirements, warnings & cautions. Use the product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage and/or personal injury and will invalidate the warranty. Keep these instructions safe for future use.

Specification

- Model No: **DH265**
- Fuse Rating: 7A
- Maximum Operating Temperature: 100°C
- Maximum Working Pressure: 2bar(29psi)
- Weight: 3.46kg
- Plug Type: 3-Pin **BS**
- Power Supply Cable Length: 4.7m
- Power: 1300W
- Supply: 230V
- Tank Capacity: 360ml
- Warm Up Time: 20s



Refer to
instructions




Warning!
Steam

Safety Instructions

• ELECTRICAL SAFETY

- **WARNING!** It is the user's responsibility to check the following:
- Check all electrical equipment and appliances to ensure that they are safe before using.
- Inspect power supply leads, plugs and all electrical connections for wear and damage.
- Ensure that the insulation on all cables and on the appliance is safe before connecting it to the power supply.
- **DO NOT** use worn or damaged cables, plugs or connectors.
- Ensure that any faulty item is repaired or replaced immediately by a Sealey qualified technician.
- If the cable or plug is damaged during use, switch off the electricity supply and remove from use.
- Sealey recommend that an **RCD** (Residual Current Device) is used with all electrical products.
- Important: Ensure that the voltage rating on the appliance suits the power supply to be used and that the plug is fitted with the correct fuse.
- **DO NOT** pull or carry the appliance by the power cable.
- **DO NOT** pull the plug from the socket by the cable.
- **CAUTION** - To reduce the risk of fire, electric shock, or injury:
- To provide continued protection against risk of electric shock, connect to properly grounded outlets only.
- This appliance can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- The liquid or steam must not be directed towards equipment containing electrical components, such as the interior of ovens.
- Children shall **NOT** play with the appliance.
- Cleaning and user maintenance on the appliance shall not be made by children without supervision.
- The appliance must be unplugged after use and before carrying out user maintenance.
- The appliance shall not be left unattended while it is connected to the supply mains.
- The appliance is not to be used if it has been dropped, if there are visible signs of damage or if it is leaking.
- Keep the appliance out of reach of children when it is energized or cooling down.
- This product is designed for domestic use only.
- **DO NOT** use outdoors.
- **DO NOT** leave the Mop unattended while switched on.
- Turn off the switch and unplug the electrical cord when not in use and before servicing.
- **DO NOT** allow to be used as a toy. Close attention is necessary when used near children, pets or plants.
- Never direct steam towards people, animals, plants, or equipment containing electrical components, such as interior ovens.
- **DO NOT** immerse the Folding Mop into water or other liquids.
- **DO NOT** use with damaged cord or plug. If the Mop is not working as it should, has been dropped, damaged, left outdoors, or immersed into water, return it Sealey before continuing use.
- If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person to avoid a hazard.
- **DO NOT** pull or carry by cord, use cord as a handle, close a door on the cord, or pull cord around sharp edges or corners. Keep cord away from heated surfaces.
- **DO NOT** use extension cords or outlets with inadequate current carrying capacity.
- Unplug the appliance after use and before carrying out user maintenance on the appliance.
- **DO NOT** handle plug or Mop with wet hands or operate without shoes.
- **DO NOT** insert any objects into openings. **DO NOT** use with any opening blocked.
- **DO NOT** use without floor cloth in place. **DO NOT** use without water in the water tank.
- When using on stairs use extra caution.
- Store your Mop indoors in a cool, dry area.
- Keep your work area well lit.
- Never put any cleaning detergents into the Mop. This will make the operation unsafe and damage the unit.
- Never block the steam openings of the product or place it on a soft surface, where the steam openings may be blocked. Keep the steam openings free of lint, hair, and the like.
- Use only as described in this manual. Use only manufacturer's recommended accessories.
- **DO NOT** use in swimming pools containing water.

Features


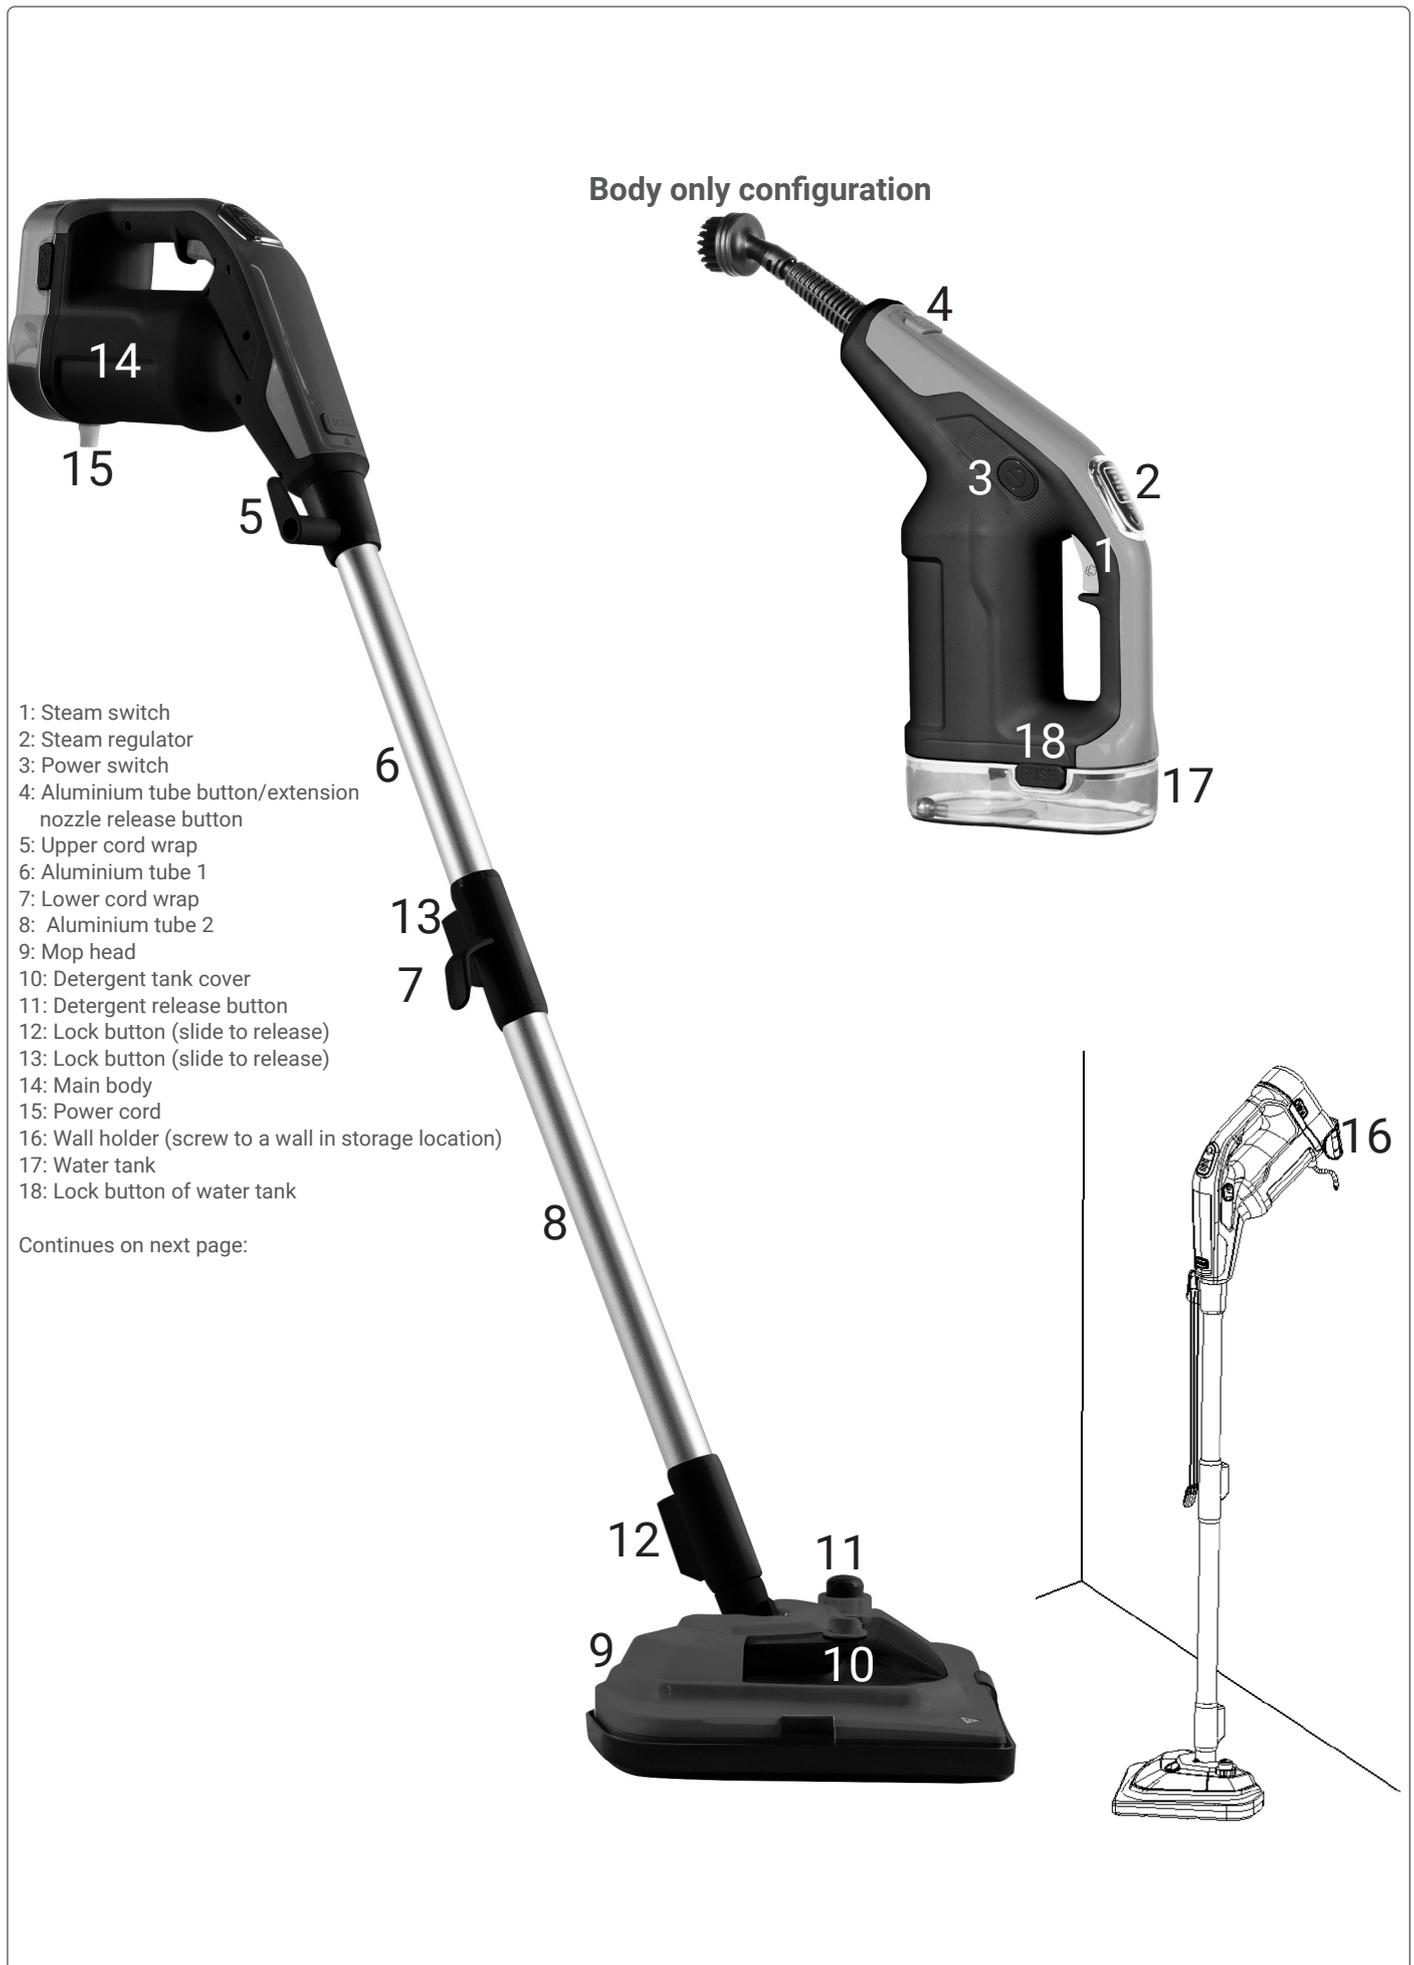





Accessories:


Large Round Brush, Small Round brush, Crevice Brush, Scraper Nozzle, Angle Nozzle, Small Window & Fabric Brush, Extension Nozzle, Microfibre Mop Pad, Small Microfibre Pad, Carpet Glider, Measuring Cup, Wall Holder (not shown)

Assembly: Steam Mop

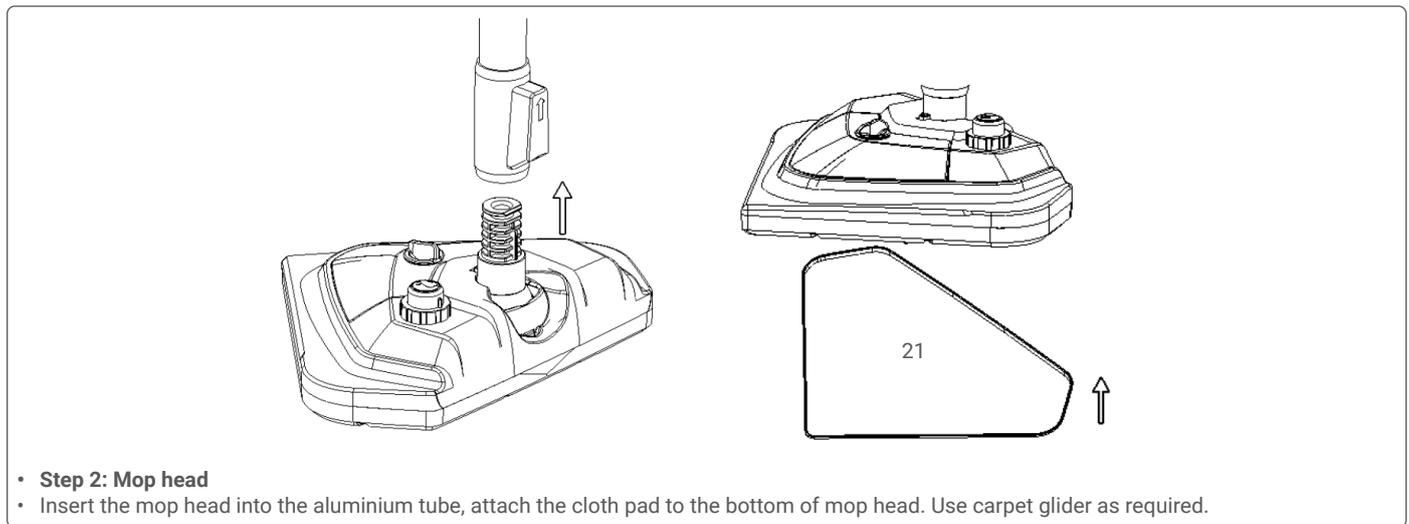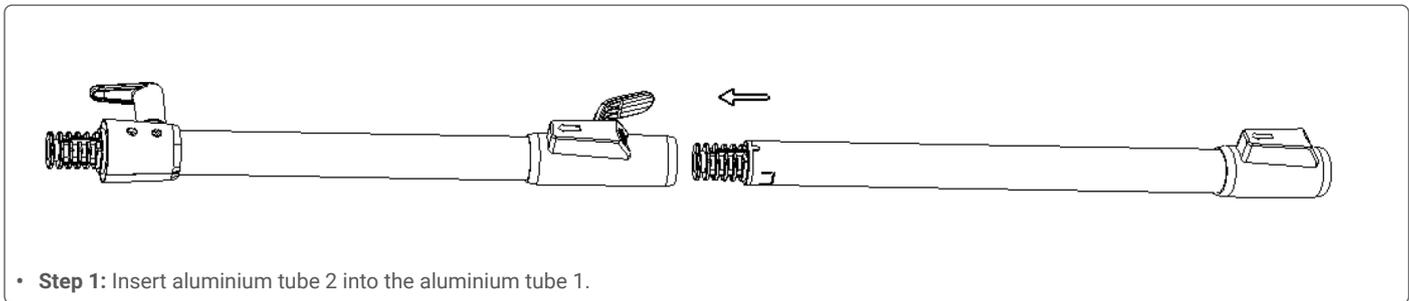


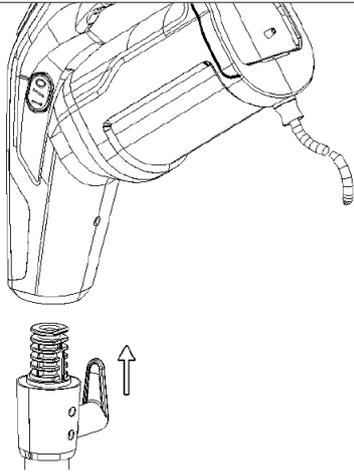




- **Step 3: Assemble main body**
- Connect main body to mop head and aluminium tube.

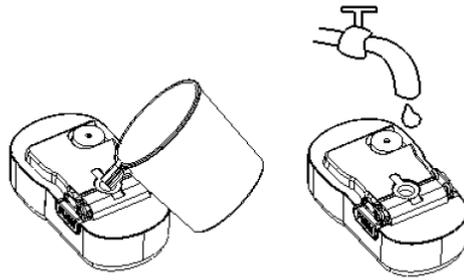

- **Step 4: Fill water tank:**
- Open soft bung on top of tank

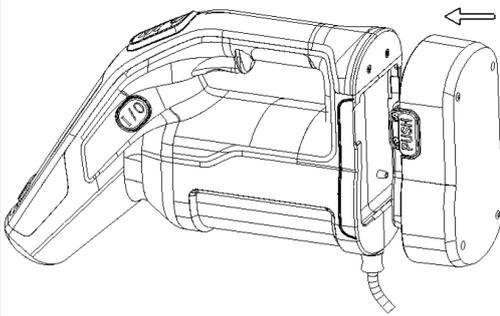

- **Step 5: Attach water tank**
- Attach the water tank (filled with water) to the main body.
- The buttons on both of sides **MUST** lock on to the main body.

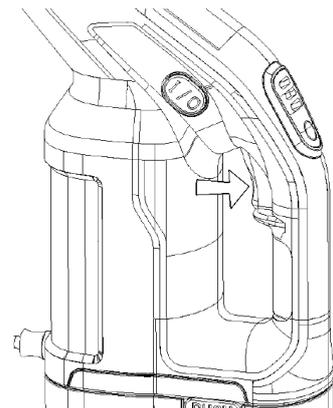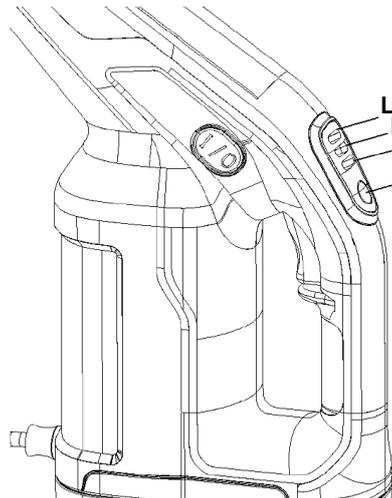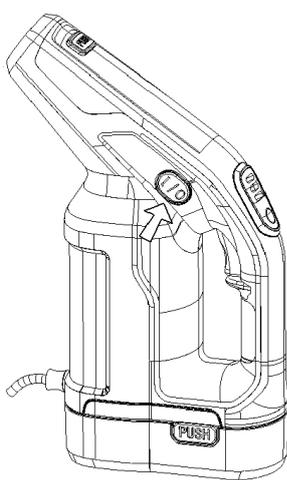

- **Step 6: Use the mop**
- Plug into mains supply, turn on the power switch, after approximately 20 seconds, the steam regulating light will change from red to blue, then scroll through steam levels (low/med/high), finally pull on the steam switch (1) to deliver steam.

- **Step 7: Body only configuration: Refer to inset illustration in Features section. Use accessories fitted to the extension nozzle (22).**
- Accessories fit onto the extension nozzle with a push twist motion.
- Attach extension nozzle (22) to the main body by pushing together until the button (4) clicks.

Maintenance

- **WARNING!** Remove from mains supply before performing Maintenance.
- Drain the remaining water in the tank after use.
- Take of the used cloth pad and wash it, and dry it in an airy place
- Put the power cord on the cord wrap, fix the main body on the wall holder.



Environment Protection, Waste Electrical and Waste Electronic Equipment Regulations (WEEE)



Recycle unwanted packaging materials. When this product is no longer required, or has reached the end of its useful life, please dispose of in an environmentally friendly way. Drain any fluids (if applicable) into approved containers, in accordance with local waste regulations. It is our policy to continually improve products and we reserve the right to alter data, specifications and parts without prior notice. No liability is accepted for incorrect use of this product. Guarantee is 12 months from purchase date, proof of which is required for any claim.

Dellonda

Sealey Group, Kempson Way, Suffolk Business Park, Bury St Edmunds, IP32 7AR



01284 757575



support@dellonda.co.uk



www.dellonda.co.uk