


**INSTRUCTIONS FOR  
 SLIDE HAMMER PULLER SET  
 PS983**

**IMPORTANT:**

To ensure the safe and effective use of this tool, please read these instructions carefully, and keep in a safe place for future reference.

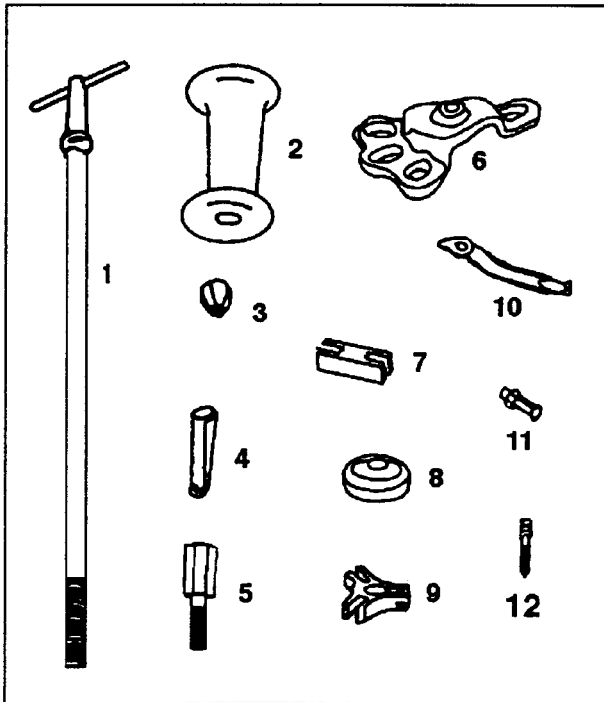

Item	Part No	Description
1.	PS983/601	T-Bar
2.	PS983/602	Hammer
3.	PS983/610	Attachment
4.	PS983/613	Hook
5.	PS983/604	Grip Wrench Adaptor
6.	PS983/603	Axle Puller
7.	PS983/606	2-Jaw Head
8.	PS983/605	Nut
9.	PS983/607	3-Jaw Head
10.	PS983/611	Leg 4" (3 x off)
11.	PS983/608	Nut & Bolt
12.	PS983/612	Screw

**MODEL No PS983 DESCRIPTION**

The Sealey 6kg Slide Hammer/Puller with 570mm Shaft set consists of 11 part numbers, for use in 8 modes: External 3 jaw Puller, internal 3 jaw Puller, external 2 jaw Puller, internal 2 jaw Puller, Grip Wrench adaptor. Lip Puller, Hub Puller, Dent Puller. Supplied in a steel carrying case.

**SPECIFICATION**

***puller Type: 2 legged***

Internal Capacity: 35-110mm      Reach: 82mm  
 External Capacity: 50-140mm      Reach: 75mm

***puller Type: 3 Legged***

Internal Capacity: 50-135mm      Reach: 82mm  
 External Capacity: 20-135mm      Reach: 75mm

**⚠ WARNING      SAFETY PRECAUTIONS**

- ✓ DO follow normal workshop safety precautions at all times
- ✓ DO wear safety glasses at all times to protect your eyes from possible breaking parts
- ✓ DO use shielding such as heavy canvas to reduce the danger from possible breaking parts
- ✓ DO ensure the adjusting strap bolts are tight on the puller jaws
- ✓ DO ensure the puller set-up is rigid and square with the workpiece
- ✓ DO ensure the centre screw threads are clean and well lubricated.
- ✓ DO NOT use the puller if it is worn or has damaged parts
- ✓ DO NOT heat the jaws of the puller. (When heating bearings or gears, be sure the torch does not touch the puller jaws, because it can change their temper.
- ✓ DO NOT continue to use the puller if maximum force has been applied and the workpiece has not moved. Use a larger capacity puller.
- ✓ DO NOT hit the workpiece with a hammer.