



**IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. PLEASE KEEP INSTRUCTIONS SAFE FOR FUTURE USE.**

## 1. SAFETY INSTRUCTIONS

- WARNING!** Ensure that Health & Safety, local authority, and general workshop practice regulations are adhered to when using this equipment.
- WARNING!** Disconnect from air supply before changing accessories or servicing.
- Maintain the grinder in good condition (use an authorised service agent).
- Replace or repair damaged parts. Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.
- Use in a suitable work area. Keep area free from unrelated materials and ensure that there is adequate lighting.
- Before each use check abrasive disc for condition. If worn or damaged replace immediately.
- Ensure that the speed rating (rpm) of the disc is the same as, or greater than, the speed rating of the grinder.
- Ensure that there are no flammable or combustible materials near the work area.
- WARNING!** Always wear approved eye (or face) and hand protection when operating the grinder.
- Use face, dust, or respiratory protection in accordance with COSHH regulations.
- Depending on the task, grinder noise level may exceed 85dB in which case wear safety ear defenders.
- Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery and contain and/or tie back long hair.
- Wear appropriate protective clothing and keep hands and body clear of working parts.
- Maintain correct balance and footing. Ensure that the floor is not slippery and wear non-slip shoes.
- Keep children and unauthorised persons away from the work area.
- Check moving parts alignment on a regular basis.
- Ensure that the workpiece is secure before operating the grinder. Never hold a workpiece by hand.
- Check the workpiece to ensure there are no protruding screws, bolts, nuts etc.
- Avoid unintentional starting.
- WARNING!** Ensure correct air pressure is maintained and not exceeded. Recommended pressure 70-90psi
- Keep air hose away from heat, oil and sharp edges. Check air hose for wear before each use and ensure that all connections are secure.
- Prolonged exposure to vibration from this grinder poses a health risk. It is the owner's responsibility to correctly assess the potential hazard and issue guidelines for safe periods of use and offer suitable protective equipment.
- DO NOT** use the grinder for a task it is not designed to perform.
- DO NOT** operate grinder if any parts are damaged or missing as this may cause failure and/or personal injury.
- WARNING! DO NOT** grind any materials containing asbestos.
- DO NOT** carry the grinder by the hose, or yank the hose from the air supply.
- DO NOT** force, or apply heavy pressure to, the grinder, let the tool do the work.
- DO NOT** place air line attachments close to your face and do not point them at other people or animals.
- DO NOT** operate grinder when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- DO NOT** use the grinder where there are flammable liquids, solids or gases, such as paint solvents and including waste wiping or cleaning rags etc.
- DO NOT** carry the grinder with your finger on the power lever.
- DO NOT** direct air from the air line at yourself or others.
- When not in use disconnect from air supply and store in a safe, dry, childproof location.

### DANGER OF FIRE/EXPLOSION HAZARD

- WARNING!** The grinding process can produce streams of sparks which are a potential source of ignition especially when grinding metal.
- DO NOT** use the grinder where there are flammable liquids, solids or gases.
- DO NOT** allow grinder sparks to make contact with the operator's clothing or any other fabric such as cleaning rags. Fabrics contaminated with inflammable materials such as petrol, oil, grease, paint and solvents are a particular fire hazard.
- To reduce the risk of clothing catching fire the operator should wear wool or cotton outer garments treated with a fire retardant in preference to man-made fibres.



### 1.2. LEAD PAINT WARNING!

Paint once contained lead as a traditional ingredient. Contact with the dust from the removal of such paint is toxic and must therefore be avoided. The following action must be taken before using the grinder on a surface that you suspect may contain lead paint.

1. User must determine potential hazard relating to age of paint to be removed (modern paints do not have lead content).
2. **DANGER!** Keep all people and pets away from the working area. The following are particularly vulnerable to the effects of lead paint dust: Pregnant women, babies and children.
3. We recommend personal protection by using the following safety items:
  - a) Paint Spray Respirator (Our ref SSP1699)
  - b) PE Coated Hooded Coverall (Our ref SSP267). c) Latex Gloves (Our ref SSP24).
4. Take adequate measures to contain the paint dust, flakes and scrapings.
5. Continue to wear safety equipment as in (3) above and thoroughly clean all areas when work is complete. Ensure that paint waste is disposed of in sealed bags or containers according to local regulations.

### Risk of Hand Arm Vibration Injury

Heavy Duty Angle Grinder Model No. SA152.V2 when operated in accordance with these instructions and tested in accordance with EN 28662-2: 1994 results in the following vibration emission declared in accordance with BS EN12096: 1996.

Measured vibration emission value: . . . . . 2.4m/sec<sup>2</sup>

Uncertainty: . . . . . 0.96m/s<sup>2</sup>

**These values are suitable for comparison with emission levels of other tools that have been subject to the same test.**

**This tool may cause hand-arm vibration syndrome if its use is inadequately managed.**

### Recommended measures to reduce risk of hand-arm vibration syndrome:

This item represents a low Hand Arm Vibration risk to users. The calculated maximum usage period exceeds 8 hours. We recommend appropriate safety equipment is utilised and regular breaks for the operator are employed to reduce any residual risk of fatigue or repetitive strain injury.

## 2. INTRODUCTION & SPECIFICATION

Lightweight, easy to handle composite body reduces the effects of vibration and chill. Features rear exhaust with baffle for reducing noise level, safety throttle lever and spindle stop button. Supplied with side handle and spanner. Grinding disc not supplied. Professional workshop quality.

Disc Diameter.....100mm  
 Free Speed .....10000rpm  
 Operating Pressure ..... 90psi  
 Air Consumption ..... 4cfm  
 Air Inlet ..... 1/4" BSP

Weight ..... 1.8kg  
 Grinding Disc Part No. ....PTC/100G  
 Sound Power Level.....91dB(A)  
 Sound Pressure Level.....89dB(A)

## 3. PREPARING GRINDER

### 3.1 AIR SUPPLY

Recommended hook-up is shown in fig.1.



- WARNING!** Ensure the air supply is clean and does not exceed 90 psi while operating the grinder. Too high an air pressure and/or unclean air will cause excessive wear, and may be dangerous, causing damage and/or personal injury.

- 3.1.1 Ensure that the grinder air valve (or throttle) is in the "off" position before connecting to the air supply.
- 3.1.2 You will require an air pressure between 70-90psi, and an air flow according to the specification above.
- 3.1.3 Drain the air tank daily. Water in the air line will damage the grinder and invalidate your warranty.
- 3.1.4 Clean air inlet filter weekly.
- 3.1.5 Line pressure should be increased to compensate for unusually long air hoses (over 8 metres). The minimum hose diameter should be 1/4" I.D. and fittings must have the same inside dimensions.
- 3.1.6 Keep hose away from heat, oil and sharp edges. Check hoses for wear, and make certain that all connections are secure.

### 3.2 COUPLINGS

- 3.2.1 Vibration may cause failure if a quick change coupling is connected directly to the grinder. To prevent this, connect a leader hose - Sealey model number AH2R or AH2R/38 - to the grinder. A quick change coupling may then be used to connect the leader hose to the air line recoil hose. See figs. 1 & 2 on next page.

fig. 1

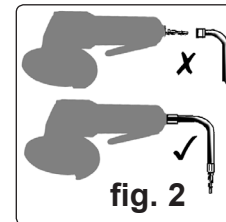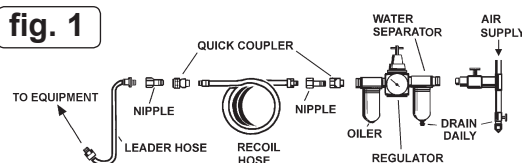

## 4. OPERATING INSTRUCTIONS

- WARNING!** Ensure that you read, understand and apply the safety instructions before use.

### 4.1 ASSEMBLY

- 4.1.1 The SA152 comes with a handle and a spanner.
- 4.1.2 The handle screws into the left-hand side of the head.
- 4.1.3 Remove the disc locking flange nut from the grinder spindle. Use the spindle stop button and the spanner supplied to hold the spindle and loosen/tighten the lock nut.
- 4.1.4 Fit the grinding disc over the spindle (with the protruding side downwards) and retain it with the flange nut. Use only discs with speed ratings equal to, or higher than, the speed rating of the grinder.
- 4.1.5 Connect air supply to grinder and squeeze the control valve lever to check that the grinder is working correctly.



### 4.2 OPERATING

**DO NOT** apply excessive pressure, let the grinder do the work for you. Start the grinder and bring the disc to the the work surface evenly and slowly. Move the grinder back and forth in overlapping areas. Remove the grinding disc from the work surface before stopping the grinder. Regularly check the condition of the disc and always change if worn, cracked or otherwise damaged.

**DO NOT** run the grinder off the workpiece for extended periods. This will shorten the life of the bearings.

## 5. MAINTENANCE

- WARNING!** Disconnect the grinder from air supply before changing the disc, servicing or performing maintenance. Replace or repair damaged parts. Use genuine parts only. *Unauthorised parts may be dangerous and will invalidate the warranty.*
- 5.1 Lubricate the grinder daily with a few drops of good grade air tool oil, such as Sealey ATO/500 or ATO/1000, dripped into the air inlet before use or dispensed automatically through an air system oiler, such as Sealey model SA100L or SA2001/L.
  - 5.2 Clean the grinder after use and change the disc when worn or damaged.
  - 5.3 Loss of power or erratic action may be due to the following:
    - a) Excessive drain on the air supply. Moisture or restriction in the air line. Incorrect size or type of hose connectors. To remedy, check the air supply and follow instructions in Section 3.
    - b) Grit or gum deposits in the grinder may also reduce performance. Flush the grinder with gum solvent oil or an equal mixture of SAE No 10 oil and kerosene. Allow to dry before use. If you continue to experience problems, contact your local Sealey service agent.
  - 5.4 When not in use, disconnect from air supply, clean grinder and store in a safe, dry, childproof location.

## Declaration of Conformity



We, the sole importer into the UK, declare that the product listed here is in conformity with the following standards and directives. The construction file for this product is held by the Manufacturer and may be inspected, by a national authority, upon request to Jack Sealey Ltd.

**100mm Air Angle Grinder  
 Composite Housing  
 Model No: SA152.V2**  
 93/68/EEC CE Marking Directive  
 2006/42/EC Machinery Directive  
 BSEN792-7:2002

Signed by Mark Sweetman 20th July 2009

For Jack Sealey Ltd. Sole importer into the UK of Sealey Power Tools.