

Please Read

Important Fitment Note

Negative Earth Electronic Systems Only

- This Lucas distributor replaces ALL electronic and points type 4, 6 and 8 cylinder type ignition systems.
- This unit is to suit negative earth/ground vehicles only.
- The loom supplied with this distributor connects directly to the high power electronic HT coil also supplied. (Lucas DLB198).
- Distributor Wiring:
 - RED - Positive (+ve) side of HT coil.
 - GREEN - Negative (-ve) side of HT coil.
- Do not add an additional ground wire to the negative side of the coil.
- This system requires a 12volt NON BALLAST ignition from the vehicles wiring loom fed to the positive side of the HT coil.
- If there is a rev counter wire on the negative side of the existing coil this will need to be re-connected to the negative side of the new HT coil.