



INSTRUCTIONS FOR:
HYDRAULIC MOTORCYCLE LIFT 450KG
 MODEL NO: **MC454**

Thank you for purchasing a Sealey product. Manufactured to a high standard, this product will, if used according to these instructions, and properly maintained, give you years of trouble free performance.



IMPORTANT: PLEASE READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS & CAUTIONS. USE THE PRODUCT CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. KEEP THESE INSTRUCTIONS SAFE FOR FUTURE USE.

1. SAFETY

- WARNING! THIS LIFT IS ONLY SUITABLE FOR MOTORCYCLES WHICH HAVE A CENTRE STAND.**
- WARNING! Ensure the bike is adequately strapped onto the platform before operating.**
- ✓ Maintain the lift in good condition (use an authorised service agent).
- ✓ Replace or repair damaged parts. *Use genuine parts only. Unauthorised parts may be dangerous and will invalidate the warranty.*
- ✓ Use a qualified person to lubricate and maintain the lift. **DO NOT** use brake fluid to top up hydraulic unit.
- ✓ Locate the lift in a suitable work area, keep area clean and tidy and free from unrelated materials, and ensure that there is adequate lighting. Also ensure that the floor is level and strong enough (preferably concrete) to take the weight of the lift and the bike. **DO NOT** operate the lift on tarmac, as the surface may be unstable.
- ✓ Keep the lift clean for best and safest performance.
- ✓ The maximum bike weight is 450kg. **DO NOT** exceed this rated capacity.
- ✓ Remove ill fitting clothing. Remove ties, watches, rings and other loose jewellery, and contain long hair.
- ✓ Maintain correct balance and footing, do not over reach. Ensure the floor is not slippery and wear non-slip shoes.
- ✓ Ensure the bike is adequately secured to the lifting platform with appropriate straps.
- ✓ Before lifting check that there are no overhead obstructions.
- ✓ When platform has been raised to the working height ensure the locking bar is engaged to prevent accidental lowering.
- ✓ Keep children and unauthorised persons away from the work area.
- ✓ The lowering speed will vary according to the weight of the load and the amount by which the release pedal is depressed.
- x **DO NOT** use the lift for a task it is not designed to perform.
- x **DO NOT** operate the lift if damaged.
- x **DO NOT** exceed the rated capacity of the lift.
- x **DO NOT** operate the lift when you are tired or under the influence of alcohol, drugs or intoxicating medication.
- x **DO NOT** allow untrained persons to operate the lift.
- x **DO NOT** attempt to transport a load on the lift. The lift must only be used in a static position for raising and lowering loads.
- x **DO NOT** make any modifications to the lift and **DO NOT** adjust or tamper with the safety valve.
- ✓ Before lowering the lift ensure that there are no obstructions underneath and that all persons are standing clear.
- ✓ Before storing in safe area, ensure all parts are clean and free of grease and oil. Store lift in the lowest position.

2. INTRODUCTION

All steel construction with foot operated, integral hydraulic pump and ram assembly. Fitted with safety lock device to fix platform at three working heights of 660mm, 545mm and 405mm and to prevent accidental lowering. Suitable only for motorcycles with a centre stand or supported on a rear paddock stand (see MC401). Support platform fitted with full width loading ramp. Base assembly fitted with transport wheels and lock downs to prevent lift from moving during use.

3. SPECIFICATION

Capacity	450kg	Width	660mm
Minimum Height	195mm	Length	2515mm
Maximum Height	780mm	Max. Load Length	1825mm

4. ASSEMBLY

Unpack the lift and check contents with list below. Should there be any damaged or missing parts contact your supplier immediately.

Content

- Main Assembly
- Sliding Plate
- Leading Plate
- Vice
- Lifting Pedal
- Release Pedal
- Bolts, Washers, Nuts, Cotter Pins

WARNING! Keep your hands away from moving parts.
Numbers in brackets refer to item numbers in the parts diagram.

4.1. Assembly

- 4.1.1. Fit wheels (26) to the wheel axle and secure the wheels with washers (27) and R-pins (28).
- 4.1.2. Attach the leading plate (9) to the end of the platform (1).
- 4.1.3. Fit the front wheel vice assembly (2, 3) to the front of the platform (1) using bolts (5), washers (6) and nuts (7).
- 4.1.4. Fit the stop plate (4) using bolts (5), washers (6) and nuts (7).

4.2. Before first use

- 4.2.1. Remove the transit plug on the hydraulic pump and replace with the vented plug (fig.1.A) provided.
- 4.2.2. Leave the pump for one hour, to allow the oil to settle, before purging the system.
NOTE: Failure to allow sufficient time for the oil to settle could result in air remaining in the oil. In this event, the pump will not purge completely first time and a second purge will be required.
- 4.2.3. Purge the hydraulic circuit to eliminate any air in the system, by fully pressing the release foot pedal (21) and pumping the lift pedal (22) 15 to 20 times.
- 4.2.4. Test the lift, unladen, by raising it to full height and then lowering it. Depress release valve pedal (21) slowly to control the rate of descent.

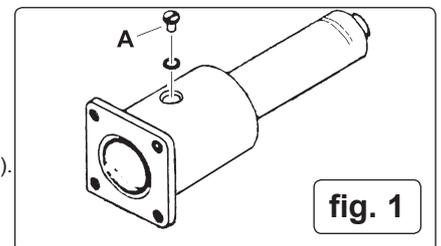


fig. 1

5. OPERATION

- WARNING! Ensure that you read, understand and apply the safety instructions before use.**
- WARNING! DO NOT attempt to overload the lift.**
- 5.1. Position the lift in a suitable area, checking that the surface on which the lift will stand is solid and flat (preferably concrete).
- 5.2. Turn the adjusting stay bolt (30) down to raise the castors (18) off the ground to prevent the lift from moving.
- 5.3. Wheel the motorcycle up the leading plate (9) and onto the platform (1).
- WARNING! The motorcycle must be fully supported by the lift platform (1) before lifting. DO NOT put the rear wheel of the motorcycle on the leading plate (9) and DO NOT use the leading plate (9) to support the weight of the motorcycle when lifting.**
- WARNING! The leading plate (9) is only used to help you to wheel the motorcycle onto the platform when the lift is at its lowest position.**
- 5.4. Clamp the front wheel in the vice to prevent any movement of the motorcycle.
NOTE: There is a choice of mounting holes for the vice to cater for various sizes of motorcycle.
- 5.5. Strap the motorcycle securely to the platform.
- 5.6. Raise the lift by pumping on the foot pedal (22).
- 5.7. When the platform has been raised to the working height, pass the locking bar (41) through the holes in the base assembly (16) so that the lift can not be inadvertently lowered.
- 5.8. When the work is done, check under the lift that there are no obstructions and that it is safe to lower the unit. Remove the locking bar (41) and then **SLOWLY** press the release foot pedal (21) to **GENTLY** lower the lift.
NOTE: The speed of lowering is controlled by the release valve. The more the valve is opened the more rapidly the lift descends. Ensure the descent is slow and controlled.
- 5.9. When the lift is fully lowered, unstrap the motorcycle, open the vice jaws and remove the motorcycle from the lift.

6. MAINTENANCE

- 6.1. When the lift is not in use, it must be stowed in the lowest position to minimise ram and piston corrosion.
- 6.2. Keep the lift clean and wipe off any oil or grease. Lubricate all moving parts..
- 6.3. Before each use check all parts. If any part of the lift is damaged or would compromise safe use, remove lift from service and take necessary action to repair.
DO NOT use the lift if it is believed to have been subjected to abnormal load or shock. Inspect and take appropriate action.
- 6.4. Periodically check the ram and piston for signs of corrosion. Clean exposed areas with a clean oiled cloth.
- 6.5. The hydraulic oil level is checked as follows:
 - 1) Remove hydraulic unit from lift and stand upright.
 - 2) Remove vented plug (fig.1.A). Correct oil level is up to plug aperture - add hydraulic oil as necessary.
- WARNING! Only a good quality hydraulic oil, such as SEALEY HYDRAULIC OIL, must be used. DO NOT use brake fluid. IMPORTANT! Only fully qualified personnel should attempt maintenance or repair. Contact your authorised dealer.**



Environmental Protection



Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.

IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THE LIFT.

Hydraulic products are repaired by local service agents only. We have service/repair agents in all parts of the UK.

DO NOT RETURN THE PRODUCT TO US. Please call us on 01284 757500 to obtain the address and telephone number of your local agent.

If the product is under guarantee please contact your dealer.

De-commissioning

Should the lift become completely unserviceable, draw off the oil into an approved container and dispose of the lift and the oil according to local regulations.

NOTE: It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

IMPORTANT: No liability is accepted for incorrect use of this product.

WARRANTY: Guarantee is 12 months from purchase date, proof of which will be required for any claim.

INFORMATION: For a copy of our latest catalogue and promotions call us on 01284 757525 and leave your full name and address, including postcode.



Sole UK Distributor, Sealey Group,
Kempson Way, Suffolk Business Park,
Bury St. Edmunds, Suffolk,
IP32 7AR

01284 757500
 01284 703534

www.sealey.co.uk
 sales@sealey.co.uk