



INSTRUCTIONS FOR:  
**HYDRAULIC FORKLIFT / TRACTOR**  
**4/5 TONNE**  
 MODEL NO: **FJ45.V3**

Thank you for purchasing a Sealey product. Manufactured to a high standard this product will, if used according to these instructions and properly maintained, give you years of trouble free performance.

**IMPORTANT: READ THESE INSTRUCTIONS CAREFULLY. NOTE THE SAFE OPERATIONAL REQUIREMENTS, WARNINGS AND CAUTIONS. USE THIS JACK CORRECTLY AND WITH CARE FOR THE PURPOSE FOR WHICH IT IS INTENDED. FAILURE TO DO SO MAY CAUSE DAMAGE AND/OR PERSONAL INJURY AND WILL INVALIDATE THE WARRANTY. RETAIN THESE INSTRUCTIONS FOR FUTURE USE.**

**1. SAFETY**



Read the instructions



Wear protective footwear



Warning crushing of hands




Use axle stands



Use wheel chocks

- ✓ Ensure that the jack is in good working order. Take action for immediate repair or replacement of damaged parts. Use *genuine parts only*. The use of unauthorised parts may be dangerous and will invalidate the warranty.
- ✓ Locate the jack in a suitable, well lit work area.
- ✓ Keep work area clean and tidy and free from unrelated materials.
- ✓ Use jack on a level and solid ground, preferably concrete. *Avoid tarmac/adam as the jack may sink in.*
- ✓ Place wedges under wheels of the vehicle (*but ensure wheels of the jack can move freely*).
- ✓ Ensure the vehicle handbrake is engaged, engine/motor is switched off and transmission is in 1st or reverse gear.
- ✓ Ensure a minimum distance of 0.5m between vehicle and static objects such as doors, walls, etc., to allow for vehicle tilting.
- ✓ Ensure there are no passengers in the vehicle.
- ✓ Ensure all non-essential persons keep a safe distance whilst the jack is in use.
- ✓ Only place jack under those lifting points recommended by the vehicle manufacturer (*see vehicle handbook*).
- ✓ Check the lifting point is stable and centred on the jack saddle.
- ✓ Ensure the jack wheels are free to move and that there are no obstructions.
- ✓ **DANGER: Use the jack for lifting only, NOT for supporting the lifted load.**
- ✓ Use suitable capacity axle stands under the vehicle before proceeding with any task.
- ✓ Ensure there are no persons or obstructions beneath the vehicle before lowering.
- ✓ Use a qualified person to maintain or repair the jack hydraulic system.
- \* **DO NOT** operate the jack if damaged.
- \* **DO NOT** allow untrained persons to operate the jack.
- \* **DO NOT** exceed the rated capacity of the jack.
- \* **DO NOT** allow the vehicle to move while supported by the jack and **DO NOT** use the jack to move the vehicle.
- \* **DO NOT** jack the vehicle if there is a risk of spillage of fuel, battery acid, or other dangerous substance.
- \* **DO NOT** work under the vehicle until axle stands have been correctly positioned.
- \* **DO NOT** use the jack for purposes other than that for which it is designed.
- \* **DO NOT** top up hydraulic system with brake fluid. Use hydraulic jack oil only.
- \* **DO NOT** adjust the safety overload valve.
- ✓ When not in use store the jack, fully lowered, in a safe, dry, childproof area.
- ☐ **WARNING! It is very dangerous to go under a vehicle which is supported by a jack even if additional supports are used. DO NOT go under a vehicle unless it is supported by adequately rated axle stands.**
- ☐ **IMPORTANT! Ensure that you can see the saddle and jacking point throughout the jacking operation in case there is any relative movement.**

fig.1

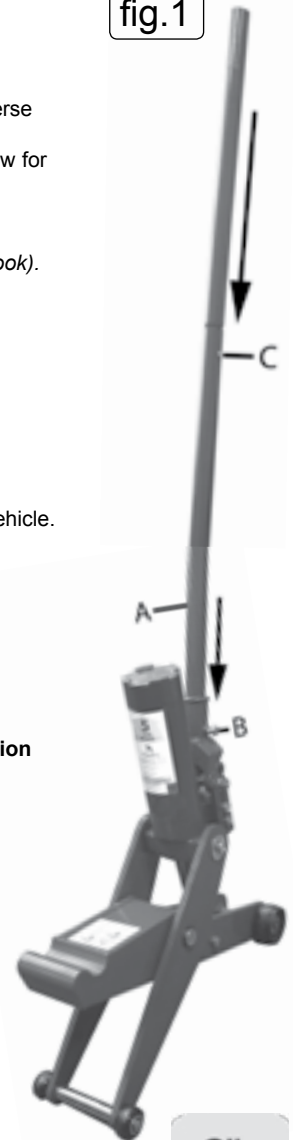

See 4.3.

**2. INTRODUCTION**

Scissor action jack suitable for automotive, industrial and agricultural applications. Ideal for vehicles with low ground clearance. Front scissor nose, 4tonne capacity with minimum height of 65mm, allows use under forklifts. Cylinder cap 5tonne capacity with minimum height of 416mm suits agricultural and other vehicles with high set jacking points.

Other Text:

**IMPORTANT SAFETY WARNING! ALWAYS USE RATED STANDS.**

Please remember a jack is a lifting and lowering device and is not designed to support a load. Never get underneath a vehicle/load supported only by a jack; your life is at risk. We stock a comprehensive range of axle stands, for example, please see relevant catalogue section for full details. The jack is not limited to forklift/ tractor/vehicle use only, with many applications in the engineering and construction industries.

**3. SPECIFICATION**

Capacity: Scissor Nose: . . . . .4000kg	Min. Cylinder Cap Height: . . . . .416mm
Cylinder Cap: . . . . .5000kg	Max. Cylinder Cap Height: . . . . .715mm
Min. Scissor Nose Height: . . . . .65mm	Weight: . . . . .42kg
Max. Scissor Nose Height: . . . . .425mm	

## 4. ASSEMBLY

- 4.1. Insert the lower handle (fig.1A) into the socket ensuring that the linking rod engages in the block at the foot of the handle. With the lower handle in, tighten bolt (fig.1B) to securely clamp the handle. Then slot in the upper jacking handle into the lower, line up the holes in each and secure with the small bolt (fig.1C).
- 4.2. Remove the transportation plug on the side of the cylinder and replace with the vented plug.
- 4.3. Oil the mechanical parts before first use - and regularly thereafter.
- 4.4. Before using for the first time, open the release valve (see 4.2.1.) and pump the handle for 30-40 seconds. Close the release valve. This will purge any air from the hydraulic system. Jack is now ready for use.

## 5. OPERATION

### 5.1. Jacking

**WARNING! Before lifting, ensure that Section 1 safety instructions are strictly followed.**

- 5.1.1. Prepare vehicle as described in safety instructions ensuring that the ground on which jack is to stand is level and solid (not tarmac).
- 5.1.2. Position the lifting arm or cylinder saddle under the vehicle manufacturer's recommended lifting point (see vehicle handbook).
- 5.1.3. Lift and lower the handle over the entire arc of operation until the saddle/arm reaches the lifting point. Then pump the handle to raise the vehicle.

**Note:** If the jack becomes overloaded, the safety valve will operate and prevent the jack from lifting further.

### 5.2. Lowering the vehicle

- 5.2.1. Turn the jack handle anti-clockwise to open the release valve. Turn handle with care in order to control rate of descent.

**SAFETY WARNING! Always lower in a slow and controlled manner and ensure that there are no persons or obstacles beneath the vehicle, or in the path of descent.**

## 6. MAINTENANCE

Lifting Operations and Lifting Equipment Regulations (LOLER) 1998.

This jack, depending on use, may fall within the scope of LOLER. It is the owner's responsibility to determine whether or not it does and, if so, to comply with any applicable requirements, in LOLER, for having the jack thoroughly examined.

**IMPORTANT:** Only fully qualified personnel should attempt maintenance or repair.

- 6.1. When the jack is not in use, the ram should be in the lowest position to minimise corrosion. Remove the handle to deactivate the jack.
- 6.2. Keep the jack clean and lubricate all moving parts with oil/grease on a regular basis.
- 6.3. The pump and cylinder form a closed hydraulic system and refilling with oil is only necessary in exceptional cases. To check oil level:
  - 1) Place jack on a level surface with the saddle fully lowered.
  - 2) Remove filler screw and check that level is up to bottom of filler hole. Add hydraulic oil if necessary.

**NOTE:** Use a good quality jack oil, such as SEALEY HYDRAULIC JACK OIL.

**WARNING: DO NOT** use brake fluid, or any fluid other than hydraulic jack oil as this will cause serious damage to the jack and will invalidate the warranty!

- 6.4. Before each use check for broken, cracked, bent, or loose parts, or any visible damage to ram, pump, saddle, lifting arm, frame and all parts including nuts, bolts, pins and other fasteners. If any suspect item is found, remove jack from service and take the necessary action to remedy the problem.

**DO NOT** use the jack if it is believed to have been subjected to abnormal or shock loading. Inspect and take appropriate action.

- 6.5. Periodically check the pump piston and the ram for signs of corrosion. Clean exposed areas with a clean cloth and jack oil.

**IMPORTANT: NO RESPONSIBILITY IS ACCEPTED FOR INCORRECT USE OF THIS PRODUCT.**

Hydraulic products are repaired by local service agents only. We have service/repair agents in all parts of the UK.

**DO NOT RETURN JACKS TO US.** Please telephone us on 01284 757500 to obtain the address and telephone number of your local agent. If the jack is under guarantee you can also contact your local dealer.

De-commissioning

Should the jack become completely unserviceable, draw off the oil into an approved container and dispose of the jack and the oil according to local regulations.

## 7. TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	REMEDY
Jack will not lift the load properly or will not hold raised load.	<ol style="list-style-type: none"> <li>1) Overloaded</li> <li>2) Release valve not closed</li> <li>3) Air in system</li> <li>4) Low oil level</li> <li>5) Internal defect</li> </ol>	<ol style="list-style-type: none"> <li>1) Be sure to use jack with adequate capacity.</li> <li>2) Check and close release valve.</li> <li>3) Open release valve and pump the handle a few times. Close valve and re-try.</li> <li>4) Check level and replenish if necessary. Use only hydraulic jack oil.</li> <li>5) Contact Service Agent.</li> </ol>
Jack will not lower	<ol style="list-style-type: none"> <li>1) Unit requires lubrication</li> <li>2) Piston rod bent or damaged</li> <li>3) Jack frame/link system distorted due to overloading/ poor positioning</li> <li>4) Release valve partially closed</li> <li>5) Release valve blocked</li> </ol>	<ol style="list-style-type: none"> <li>1) Oil all external moving parts.</li> <li>2) Contact local Service Agent.</li> <li>3) Replace damaged parts or contact Service Agent.</li> <li>4) Check and fully open release valve.</li> <li>5) Clean release valve.</li> </ol>

### Environmental Protection



**Recycle unwanted materials instead of disposing of them as waste. All tools, accessories and packaging should be sorted, taken to a recycling centre and disposed of in a manner which is compatible with the environment. When the product becomes completely unserviceable and requires disposal, drain off any fluids (if applicable) into approved containers and dispose of the product and the fluids according to local regulations.**

**NOTE:** It is our policy to continually improve products and as such we reserve the right to alter data, specifications and component parts without prior notice.

**IMPORTANT:** No liability is accepted for incorrect use of this product.

**WARRANTY:** Guarantee is 12 months from purchase date, proof of which will be required for any claim.



**Sole UK Distributor, Sealey Group,**  
Kempson Way, Suffolk Business Park,  
Bury St. Edmunds, Suffolk,  
IP32 7AR

01284 757500

01284 703534



www.sealey.co.uk



sales@sealey.co.uk